



How to use the public password of the Door Station to open the door

Title:	How to use the public password of the Door Station to open the door	Version:	v1.0	Date:	2021/08/16
Product:	Video Intercom			Page:	1 of 2

Preparation

1. This guide takes

Type	Model	Version
Door station	DS-KD8003-IME1	V2.2.45_build210430
Sub module	DS-KD-KP	V1.0.0_build191213

 
 
As examples to introduce How to open door with public password.

2. Software: iVMS-4200 Version 3.6.1.3

How to use the public password of the Door Station to open the door

1. Add Devices on iVMS-4200

- 1) Search for online devices and add the door station on iVMS-4200, enter username and password, and then confirm that the device is online.

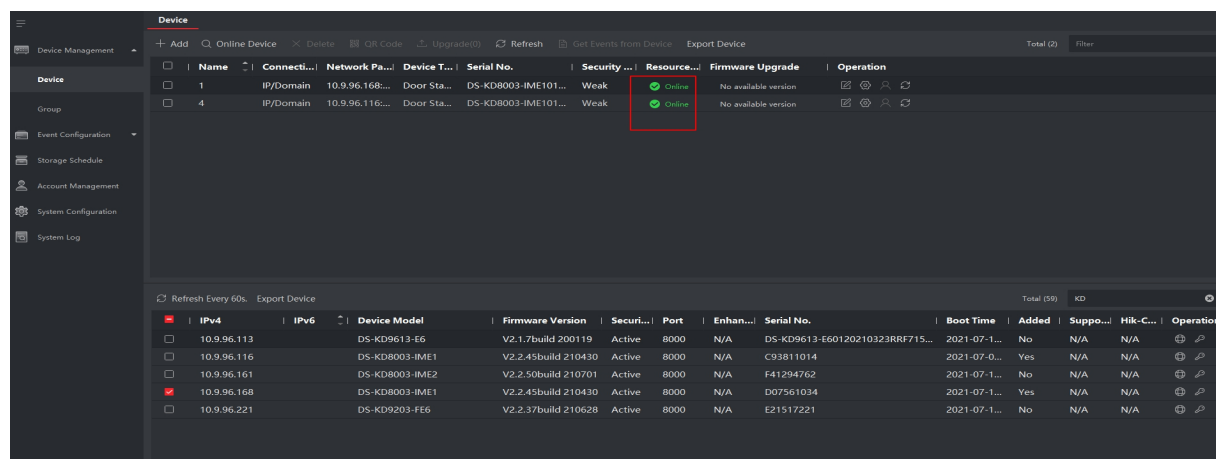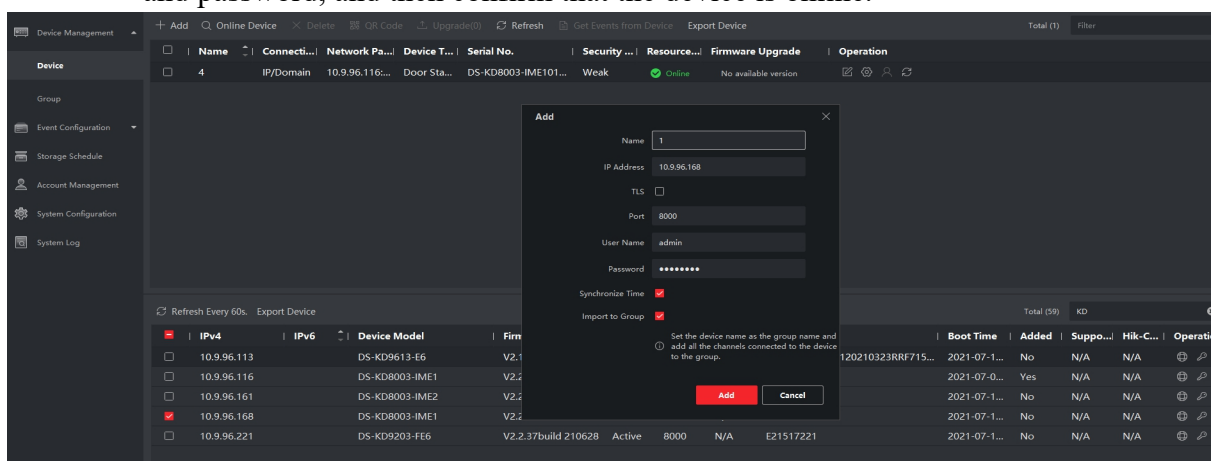

2. Set a public password for the Door Station

- 1) Go to Remote Configuration → Access Control → Password settings to set a public password


Title:	How to use the public password of the Door Station to open the door	Version:	v1.0	Date:	2021/08/16
Product:	Video Intercom			Page:	2 of 2

The screenshot shows a web-based configuration interface for a video intercom system. The window is titled 'Configuration' and has a sidebar on the left with various settings categories. The 'Access Control' category is selected and highlighted with a red box. The main content area is divided into tabs: 'Password Settings', 'Door Parameters', 'Card Security', and 'Elevator Control Parameter'. The 'Password Settings' tab is active. It contains a 'Password Type' dropdown menu set to 'Public Password2'. Below this are two input fields: 'Password' and 'Confirm', both containing masked characters (dots) and a green checkmark icon, indicating they are valid. A red 'Save' button is positioned below the input fields. The sidebar categories include Local, System, Network, Video/Audio, Image, Event, Schedule, Intercom, Access Control (highlighted), Device Management, and User.

Notice: you can set up to 16 public passwords and each password consists 4-6 digits.

3. Open door with the public password

 Enter the public password in the format of **#public password#** on the keypad and you will hear the voice prompt “the door is open”

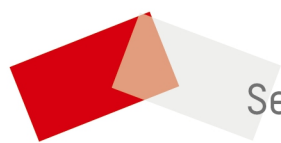

See Far, Go Further